

How to do adjustment correctly.

Important information about the adjustment of the VITO® oiltester.

VITO®
oil filter system

To get to the configuration menu you have to enter a password. The password is represented by the last two numbers of the serial number from your VITO® oiltester. Check the specific TPM-starting value for your oil / fat on the training card.

Basics



The sensor must be completely clean.



Before you start the adjustment the oil / fat must be heated up to at least 50 °C.

Preparation for adjustment



1. Push the **[HOLD]** button immediately for two seconds after turning on.
2. Enter the password, confirm every number with **[HOLD]**.
3. **Alarm** ↓ lights up in the orange coloured display.
4. Press **[HOLD]** to navigate through the menu until **CAL** and **YES** or **NO** is shown on the display. Switch it to **YES** with **[▲]** or **[▼]**.
5. Confirm with **[HOLD]**, then **OIL** and **CAL** will light up in the display.



Dip the sensor into the oil. **Mind the immersion depth!** (Sensor has to stay in the oil until the end of the adjustment!) (Alarm LED is orange)



Start the adjustment with the **[HOLD]** button.

- During the measurement the display is red
- Move the sensor around in the oil



Stop measuring when the display turns green. Compare the measured value with the start value of your fresh oil. Deviation > 1% = Adjustment necessary

Adjustment



- Adjust the value with **[▲]** or **[▼]** to the TPM-start value of your oil / fat.
- Confirm with **[HOLD]** to accept the set value.
- Make further settings or exit the configuration with **[O]**. The device then switches to the display mode.

Leaving the configuration menu



- Press **[O]** for almost one second to exit the configuration mode.
- You will return to the display mode.
- Now you can continue measuring or turn off the oiltester.